

45cm 10 Place **FREESTANDING DISHWASHER**

PRODUCT CODE: **EDS45BK**



FEATURES:

- + 10 place setting
- + Black finish
- + 2 level height adjustable upper basket
- + Slide out cutlery rack
- + Alternative wash function
- + Delay start option
- + Extra dry and strong wash functions
- + Child safety lock
- + Concealed heating element
- + Removable top cover
- + Water consumption
- + 7 wash programs
- + Rapid
- + Soak
- + ECO
- + 90 minute
- + Glass
- + Heavy
- + Intensive
- + 3.5 star energy rating
- + 3.5 star water rating

SPECIFICATIONS:

Water Consumption	11.0 Litres per wash (3.5 star water rating)
Energy Usage	189 kWh per year, Cold water connection, using ECO program seven times per week (3.5 star energy rating)
Noise Level	49db
Inlet Hose/Drain Hose Length:	1.8m / 1.4m
Water Connection	Cold water (as dishwasher has its own heating element)
Weight	45.5kg (gross) / 40.0kg (net)
Barcode	9347726038070

eurokitchen

3
YEARS
Warranty

CLEANING AND MAINTENANCE

- Cleaning operations must only be carried out when the appliance is completely cool.
- Clean the appliance regularly, preferably after each use.
- Abrasive cleaners or sharp object will damage the appliance surface; you should clean it using water and a little washing up liquid.
- Drain pump filter: requires monthly cleaning. This will ensure no interruptions with the dishwasher operation.

INSTALLATION

- Please refer to the product manual for full installation instructions.
- Product must be installed by a qualified technician.

INSTALLATION DIAGRAM

